

*dfv* Technologie Z.A. Ravennes-les-Francs 2 avenue Henri Poincaré 59910 BONDUES FRANCE

SIRET 434 355 228 00017 RCS ROUBAIX-TOURCOING APE 332B

A bad cell is

Tel : 33 (0) 3.20.69.02.85 Fax : 33 (0) 3.20.69.02.86 Email : <u>contact@dfv.fr</u> Web site: <u>www.dfv.fr</u>

## Automatic battery tester BATCAT BA24

This product tests automatically a battery during the discharge and/or charge. This new product is fully compatible with BATCAT range (PV99 ou BA249)

1111.1111.111



Test automatically battery cells

 Allows testing of 24 cells (Pb, NiCd ...) with high accuracy (±2mv)

- Stores data on PC ð Battery testing is stored in a database during it's lifetime
- Issue an alarm in case of a defective cell.
- BATCAT BA24 has also 3 auxiliary inputs : 1 for ambiant temperature 1 for electrolyt temperature 1 for discharge / charge current

 Portable, light and low cost (230x180x95mm / 1,6kg)

Compatible with full range of BATCAT
PV99 and BA249 (BATCATWIN / LOGEPNV2
softwares, cables and accessories)

- Harmonic filter integrated
- Charge and discharge current can be measured with only one clamp
- Integrated zero adjustment help for current clamp.
- BA24 can be connected together in order to measure up to 249 cells

Connection of cells

Temperature and currents probe inputs

## Measurement sequence :

The voltage of each cell is measured every 10 seconds during discharge and/or charge of the battery.

The voltage is compared with alarm thresholds and if a bad cell is detected an alam is issued. PC stores data and print measurement repport.

Connection of each cell is done either fix or flying (with crocodile clamp)